

Manual for SWAP soil Redox probes



Version: 2025-V1

Contents

About this manual	3
Manufacturer information	3
Notices	4
1. Introduction	6
2. Working principle	7
3. Care and safety	8
4. Product overview	9
4.1 Features	9
4.2 Technical specifications	9
5. Parts list	10
6. Getting started	15
6.1 Calibration	15
6.2 Cable connections	15
6.3 Installation	15
6.4 Connecting to a readout unit or datalogger	15
6.5 De-installation	19
6.6 Temperature correction	20
7. Maintenance	21
7.1 Calibration	21
7.2 Cleaning the Redox electrode	22
7.3 Maintenance of the SWAP reference electrode	22
7.4 Testing of the stand-alone SWAP reference electrode	24
8. Technical Support	25
8.1 Conditions of Sale	25
8.2 Service and repairs	25
8.3 Technical support	26
8.4 Contact details	26
Appendix A. RoHS, CE and FCC declarations	27
Appendix B. Product identification	30
Appendix C. Example of a 3-point calibration	31
Appendix D. Suggestions for datalogger connections	34

About this manual

This manual is originally written in English. Versions in another language of this manual are a translation of the original instructions.

Safety and Information symbols

Symbols used in this manual:

WARNING

This symbol identifies a hazard that could lead to personal injury, including death.

CAUTION

This symbol identifies a hazard that could lead to damage to the machine, damage to other equipment and/or environmental pollution.

ATTENTION

Follow the instructions carefully to prevent errors or damage.

INSTRUCTION

Follow the instructions carefully to obtain optimal results and prevent errors.

Manufacturer information

The products described in this manual are developed and produced by:

SWAP instruments B.V.

Meester Dekkerstraat 4
1901 PV Castricum
The Netherlands

All product information is available on our website <https://swapinstruments.com>

Notices

Intended use and application

SWAP instruments soil Redox probes are intended to be used solely in scientific applications performing environmental measurements. Every other use should be consulted and confirmed in writing by the manufacturer prior to operational use.

Class A products

SWAP probes ORP-30-1-D, ORP-40-4-D and ORP-80-4-D are Class A products, intended for operation in non-residential environments.

The RoHS compliance declaration of these products is shown in Appendix A.

CE conformity

The SWAP soil ORP probe and SWAP soil ORP profile probes conform to EC regulations regarding electromagnetic emissions and susceptibility when used according to the instructions contained within this user manual, and are CE marked by SWAP instruments B.V. The CE conformity declaration is shown in Appendix A.

FCC conformity

The SWAP soil ORP probe and SWAP soil ORP profile probes conform to USA regulations regarding electromagnetic emissions and susceptibility when used according to the instructions contained within this user manual, and are FCC marked by SWAP instruments B.V.

Note: with reference to FCC Part 18.115 Elimination and investigation of harmful interference:

- (a) The operator of the ISM equipment that causes harmful interference to radio services shall promptly take appropriate measures to correct the problem.

The FCC conformity declaration is shown in Appendix A.

User qualification

Users should be physically and mentally fit, qualified and trained to use the equipment with respect to personal and environmental safety. The user should be equipped with all needed safety and wellbeing gear for both indoor as outdoor applications.

Field operation

Only use cables and accessories authorized by SWAP instruments B.V. Sensor cables from other sources may, for example, adversely affect product performance and affect quality of results. If possible, route cables along the soil surface or bury them. This reduces trip hazard and probe damage due to animal activities.

Design change

SWAP instruments B.V. reserves the right to change designs, specifications and technical data of its products at any time without prior notification.

Till May 2025 the reference electrodes of SWAP instruments B.V. contained 3 M KCl gel as electrolyte. After this date this has been changed to saturated KCl (4.76 M KCl @ 25°C) to reduce the maintenance frequency (refilling with KCl electrolyte) of the reference electrode. The potential difference between 3 M KCl and saturated KCl (4.76 M KCl @ 25°C) is approximately +11 mV. To convert ORP values (in mV) measured with a reference

electrode that contains saturated KCl (4.76 M KCl @ 25°C) to a reference electrode that contains 3 M KCl subtract 11 mV.

Disclaimer

SWAP instruments B.V. is not responsible and/or liable for any damage to the environment and goods and/or personal injury due to the (incorrect) use of the products. SWAP instruments B.V. is also not responsible for the outcome of the measurement results.

Copyright

All rights reserved. No part of this manual may be reproduced and/or published by print, photoprint, microfilm or any other means without the previous written consent of SWAP instruments B.V. This includes translation into another language.

1. Introduction

Thank you for using our products. Much effort has been made to offer you these products, indented for high quality soil ORP measurements during its lifetime. We welcome your comments at SWAPinstruments.com.

The SWAP soil Redox probes measure soil Redox potential – also called Oxidation-Reduction Potential (ORP). The Redox sensitive electrodes are 99.99% Pt rings, that are embedded in an epoxy glass fibre shaft. Both analog and digital probes are available. The analog versions require special attention. A high impedance input of the readout equipment for these probes is required. The digital versions communicate by the SDI-12 protocol and have several advantages over the analog versions. All digital versions of the SWAP soil Redox probes have embedded electronics (high impedance input) and an integrated temperature sensor. The head and the tip of all soil Redox probes are made from POM-C. The tip contains the integrated double junction 4.76 M KCl (@ 25°C) Ag|AgCl reference electrode. It is a pointed tip for easily penetrating the probe into the soil. The PUR cable with a standard length a 5 meter leaves the head of the probe from the side and contains a M8 industry standard 4 pole waterproof plug. The plug can be connected to the SWI interface or a datalogger.

Before shipment, all probes are tested with a Redox test solution with a known oxidation-reduction potentials. The results of the SWAP test are reported in the Certificate of Quality Verification.


2. Working principle

The SWAP soil Redox probes are combined sensors with single or multiple measuring electrodes and a reference electrode. The measuring electrodes, made from 99.99 % Pt, detect changes in the Redox potential, while the reference electrode provides a stable comparison signal. The embedded electronics measures the signal accurately, applies calibration and converts it into a digital signal.

A Redox measurement reflects the ability of chemical species to oxidize or reduce other chemical species in solution. All redox active species present in solution contribute to the oxidation-reduction potential of that solution. Redox is measured as a single voltage in millivolts (mV). Oxidizers – like O_2 , H_2O_2 and Cl_2 – have a positive Redox value, while reducers – like Fe, C and H_2S – have a negative Redox value.

For more information see (Background info)

<https://www.swapinstruments.com/products/soil/documentation/>

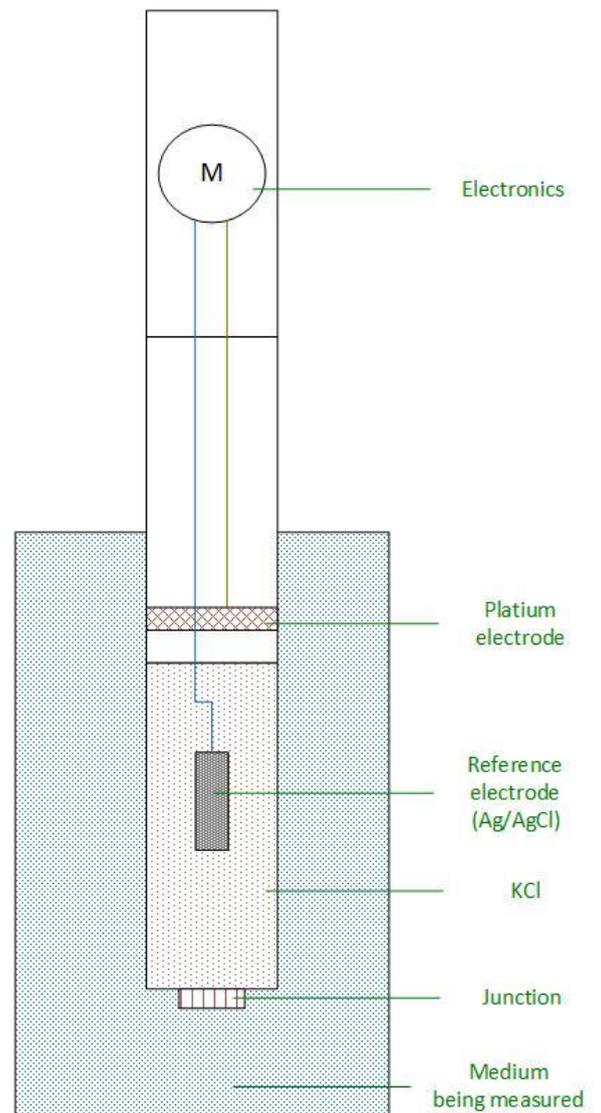

3. Care and safety

- ⚠ Before use, remove the protection and storage bottle (with 4.76 M KCl @ 25°C) from the tip (of the reference electrode) before inserting it into the soil. The tip of a SWAP soil Redox probe is pointed to ease soil insertion. Care must be taken, and handling precautions followed. Only insert SWAP soil Redox probes into soils and sediments.
- ⚠ Take care when attaching cables to ensure that the connectors are clean, undamaged and properly aligned before pushing the parts together.
- ⚠ Do not pull a SWAP soil Redox probes out of the soil by its cable.
- ⚠ If you feel strong resistance when inserting a SWAP soil Redox probe into soil, it is likely you have encountered a stone. Stop pushing and re-insert at a new location.
- ⚠ Use the SWAP pre-drills for easy soil insertion and to avoid damaging the probe(s).

4. Product overview

All our soil Redox probes are unique identified with a cable label. See Appendix B for more detailed information.

4.1 Features


- ✓ Redox potential accurate to 5 mV (Hanna ORP test solution 240 mV @ 25 °C)
- ✓ Temperature accurate to ± 0.2 °C for 0 – 20 °C
- ✓ Excellent stability
- ✓ Minimal soil disturbance
- ✓ Easy installation at depth in holes augered with the SWAP pre-drill
- ✓ PUR cable, waterproof connector to IP67
- ✓ Rugged, weatherproof and can be buried.
- ✓ Good electrical immunity

4.2 Technical specifications



For more information about the technical [swap-soil-redox-probes-technical-specs-1.pdf](#) (swainstruments.com).

5. Parts list

Your shipment with soil Redox probes may include the following:

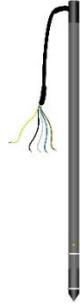SWAP Soil Redox probes (analog)	
	<p>ORP 30-1-B</p> <ul style="list-style-type: none"> ✓ 1 x Redox electrode (99.99 % Pt): at 30 cm from probe top side ✓ <u>Analog output (mV ORP)</u> ✓ 3-meter PUR cable screened with open wire ends ✓ Length 36.5 cm, diameter 0.8 cm, weight 0.1 kg
	<p>ORP 40-4-B</p> <ul style="list-style-type: none"> ✓ 4 x Redox electrode (99.99 % Pt): at 10, 20, 30 and 40 cm from probe top side ✓ <u>Analog output (mV ORP)</u> ✓ 3-meter PUR cable screened with open wire ends ✓ Length 46.5 cm, diameter 1.4 cm, weight 0.18 kg
	<p>ORP 80-4-B</p> <ul style="list-style-type: none"> ✓ 4 x Redox electrode (99.99 % Pt): at 20, 40, 60 and 80 cm from probe top side ✓ <u>Analog output (mV ORP)</u> ✓ 3-meter PUR cable screened with open wire ends ✓ Length 86.5 cm, diameter 1.4 cm, weight 0.26 kg
	<p>ORP 30-1-A</p> <ul style="list-style-type: none"> ✓ 1 x Redox electrode (99.99 % Pt): at 30 cm from probe top side ✓ 1 x Temperature electrode (NTC): at 29 cm from probe top side ✓ Integrated reference electrode: Ag/AgCl, 4.76 M KCl @ 25°C, double junction ✓ <u>Analog output (mV ORP)</u> ✓ 3-meter PUR cable screened with open wire ends ✓ Length 39 cm, diameter 1.4 cm, weight 0.15 kg
	<p>ORP 40-4-A</p> <ul style="list-style-type: none"> ✓ 4 x Redox electrode (99.99 % Pt): at 10, 20, 30 and 40 cm from probe top side ✓ 1 x Temperature electrode (NTC): at 29 cm from probe top side ✓ Integrated reference electrode: Ag/AgCl, 4.76 M KCl @ 25°C, double junction ✓ <u>Analog output (mV ORP)</u> ✓ 3-meter PUR cable screened with open wire ends ✓ Length 49 cm, diameter 1.4 cm, weight 0.22 kg

SWAP Soil Redox probes (analog)

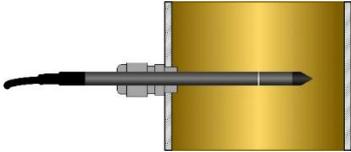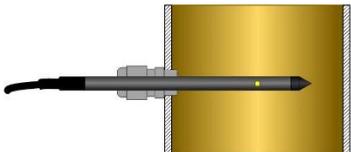	<p>ORP 80-4-A</p> <ul style="list-style-type: none"> ✓ 4 x Redox electrode (99.99 % Pt): at 20, 40, 60 and 80 cm from probe top side ✓ 1 x Temperature electrode (NTC): at 29 cm from probe top side ✓ Integrated reference electrode: Ag/AgCl, 4.76 M KCl @ 25°C, double junction ✓ <u>Analog output (mV ORP)</u> ✓ 3-meter PUR cable screened with open wire ends ✓ Length 89 cm, diameter 1.4 cm, weight 0.30 kg
	<p>ORP 30-1-BNC</p> <ul style="list-style-type: none"> ✓ 1 x Redox electrode (99.99 % Pt): at 30 cm from probe top side ✓ Integrated reference electrode: Ag/AgCl, 4.76 M KCl @ 25°C, double junction ✓ <u>Analog output (mV ORP)</u> ✓ 1.2-meter PUR cable screened with BNC connector ✓ Length 39 cm, diameter 1.4 cm, weight 0.20 kg
	<p>ORP-10-1-C</p> <ul style="list-style-type: none"> ✓ Ideal for column experiments ✓ Also suitable for field measurements ✓ 1 x Redox electrode (99.99 % Pt): at 10 cm from probe top side ✓ <u>Analog output (mV ORP)</u> ✓ 3-meter PUR screened cable with open wire ends ✓ Length 14.5 cm, diameter 0.8 cm
	<p>TMP-10-1-C (temperature probe)</p> <ul style="list-style-type: none"> ✓ Ideal for column experiments ✓ Also suitable for field measurements ✓ 1 x Temperature electrode (NTC): at 10 cm from probe top side ✓ <u>Analog output (resistance 10Kohm@25°C)</u> ✓ 3-meter PUR screened cable with open wire ends ✓ Length 14.5 cm, diameter 0.8 cm

SWAP Soil Redox probes (analog)

Custom made probe

ORP-custom made

- ✓ x-number of Redox electrodes (99.99 % Pt): at specified distances from probe top side:
- ✓ Maximum number of Redox electrodes:
 - Option 1: Max. 4 Pt electrodes (no NTC and no integrated reference electrode)
 - Option 2: With integrated reference electrode, max. 3 Pt electrodes
 - Option 3: With integrated temperature electrode (NTC), max. 2 Pt electrodes
 - Option 4: With integrated reference electrode and integrated temperature electrode, max. 1 Pt electrode
- ✓ 1 x Temperature electrode (NTC): at specified distance from probe top side
- ✓ Integrated reference electrode: Ag/AgCl, 4.76 M KCl @ 25°C, double junction
- ✓ Analog output (mV ORP)
- ✓ x-meter PUR screened cable (max. 245 meter) with open wire ends or BNC connector
- ✓ Specified probe length
- ✓ Diameter 1.4 cm

SWAP Soil Redox probes (SDI-12)

	<p>ORP-30-1-D</p> <ul style="list-style-type: none"> ✓ 1 x Redox electrode (99.99 % Pt): at 30 cm from probe top side ✓ 1 x Temperature electrode (NTC): at 29 cm from probe top side ✓ Integrated reference electrode: Ag/AgCl, 4.76 M KCl @ 25°C, double junction ✓ <u>SDI-12 output</u> ✓ 5-meter PUR cable with moulded connector IP67 ✓ Length 39 cm, diameter 1.4 cm, weight 0.17 kg
	<p>ORP-40-4-D</p> <ul style="list-style-type: none"> ✓ 4 x Redox electrode (99.99 % Pt): at 10, 20, 30 and 40 cm from probe top side ✓ 1 x Temperature electrode (NTC): at 25 cm from probe top side ✓ Integrated reference electrode: Ag/AgCl, 4.76 M KCl @ 25°C, double junction ✓ <u>SDI-12 output</u> ✓ 5-meter PUR cable with moulded connector IP67 ✓ Length 49 cm, diameter 1.4 cm, weight 0.22 kg
	<p>ORP-80-4-D</p> <ul style="list-style-type: none"> ✓ 4 x Redox electrode (99.99 % Pt): at 20, 40, 60 and 80 cm from probe top side ✓ 1 x Temperature electrode (NTC): at 50 cm from probe top side ✓ Integrated reference electrode: Ag/AgCl, 4.76 M KCl @ 25°C, double junction ✓ <u>SDI-12 output</u> ✓ 5-meter PUR cable with moulded connector IP67 ✓ Length 89 cm, diameter 1.4 cm, weight 0.30 kg
<p>Custom made probe</p>	<p>ORP-custom made</p> <ul style="list-style-type: none"> ✓ x-number of Redox electrodes (99.99 % Pt): at specified distances from probe top side (maximum of 4 Pt electrodes) ✓ 1 x Temperature electrode (NTC): at specified distance from probe top side ✓ Integrated reference electrode: Ag/AgCl, 4.76 M KCl @ 25°C, double junction ✓ <u>SDI-12 output</u> ✓ 5-meter PUR cable (max. 50 meter) with moulded connector IP67 ✓ Specified probe length ✓ Diameter 1.4 cm

SWAP Soil Redox probe drill sets

	<p>PRE-50</p> <ul style="list-style-type: none"> ✓ Suitable for Soil Redox probes ORP-30-1-B, ORP-30-1-BNC, ORP-30-1-A, ORP-30-1-D and ORP-40-4-D ✓ Length 50 cm, diameter 1.2 cm weight 0.1 kg ✓ Including non-recoil hammer ✓ Length 32 cm, width 10 cm, weight 0.82 kg
	<p>PRE-100</p> <ul style="list-style-type: none"> ✓ Suitable for Soil Redox probes ORP-30-1-B, ORP-30-1-BNC, ORP-30-1-A, ORP-30-1-D, ORP-40-4-D and ORP-80-4-D ✓ Length 100 cm, diameter 1.2 cm, weight 0.2 kg ✓ Including non-recoil hammer ✓ Length 32 cm, width 10 cm, weight 0.82 kg

SWAP Soil Redox probe accessories

	<p>REF-12-0-A</p> <ul style="list-style-type: none"> ✓ Ag/AgCl, 4.76 M KCl @ 25°C, double junction ✓ <u>Analog output (mV ORP)</u> ✓ 3-meter PUR cable with open wire ends ✓ Length 17.5 cm, diameter 1.4 cm, weight 0.24 kg
	<p>Electrolyte-100sat</p> <ul style="list-style-type: none"> ✓ 4.76 M KCl (@ 25°C) ✓ 100 ml ✓ For > 30 refills ✓ Including refilling syringe ✓ Length 4 cm, width 4 cm, height 10 cm, weight 0.13 kg
	<p>CEX-10</p> <ul style="list-style-type: none"> ✓ Extension PUR cable per 10 meter ✓ Male / female connectors (IP67) ✓ Custom lengths upon request ✓ Weight 0.27 kg

6. Getting started

6.1 Calibration

The SWAP soil Redox probes (mV ORP) are delivered uncalibrated. It is possible to establish an external calibration by measuring 1 (offset) or more (calibration line) Redox/ORP test solutions with specified Redox/ORP values. See chapter 7 (Maintenance) and Appendix C for more information.

6.2 Cable connections

- ✓ Ensure that the connectors of the cables, probes, wireless interfaces and loggers are clean, undamaged and properly aligned **before** pushing / screwing the parts together.
- ✓ To ensure watertight connections, the connectors must be screwed firmly together.
- ✓ The recommended maximum length of the extensions cables is 100 meter.
- ✓ For extra protection in long time operation, or in underwater applications, additional heat-shrink tubing is advised. (i.e. Farnell part 3236587)

6.3 Installation

It is **recommended** to use the SWAP pre-drill to pre-form a hole (12 mm in diameter) before inserting the SWAP soil Redox probes (14 mm in diameter) to the desired installation depth. This is especially essential for dry soils and for inserting the longer version ORP probes (e.g., ORP-40-4-D and ORP-80-4-D).

- ✓ Remove stones and large object.
- ✓ Push or hammer the SWAP pre-drill in the soil. Use the SWAP non-recoil for hammering. If you feel strong resistance, you have probably hit a stone. Stop, and pre-drill a hole at a new location.
- ✓ Push or hammer the SWAP soil Redox probe in the pre-formed hole. Use the SWAP non-recoil for hammering. If you feel strong resistance, you have probably hit a stone. Stop, and pre-drill a hole at a new location. Push or hammer the SWAP soil Redox probe in the new pre-formed hole.
- ✓ Make sure the Pt rings are fully inserted and that they make good soil contact.

6.4 Connecting to a readout unit or datalogger

Readout unit

The analog SWAP soil Redox probes (e.g., ORP-30-1-A) can be connected to a mV/pH meter, for example with a BNC connector. The input impedance or resistance of such an instrument should be at least 10 Giga Ohm, preferable higher. Connection to instruments should be kept clean and dry to maintain the input resistance. Please follow the instruction of such a mV/pH meter.

The SDI-12 SWAP soil Redox probes can be connected to the SWAP Wireless Interface (SWI). The standard versions of the SDI-12 SWAP soil Redox probes have an industry standard M8 waterproof 4 contact connector (see 6.4. M8 connector for details). Other connectors or pinning can be used too. Always consult the specifications of the manufacturer.

With the SWI it is possible to read the measured data and to send the data to a cloud service using the SWAP SWI app. Consult the SWI quick start guide for further instructions.

Datalogger

All SWAP soil Redox probes can be connected to a datalogger (see Appendix D for suggestions for datalogger connections) .

For analog probes, the input impedance or resistance a datalogger should be at least 10 Giga Ohm, preferable higher. Connection to instruments should kept clean and dry to maintain the needed input resistance. Poor isolation can result into false or slow measurements.


The digital probes connect to SDI-12 input as popular communication standard. The standard versions of the SDI-12 SWAP soil Redox probes have an industry standard M8 waterproof 4 contact connector (see 6.4. M8 connector for details). Other connectors or pinning can be used too. Always consult the specifications of the manufacturer.

The following guidelines are applicable when connecting SWAP instruments probes to a third-party SDI-12 logger:

- Appropriate fusing is recommended.
 - The equipment should be secured against overvoltage according to the SDI-12 standard hardware protection suggestions.
 - The probes can be on continuous power or powered only when measurements are performed.
 - The following electrical specification apply for the SDI-12 soil Redox probes:
 - Operating voltage 5 ... 17 V
 - Power consumption < 4 mA*
 - Warm-up time 0.5 sec.
 - Sample time < 5 sec.
- *Battery life is significantly extended if the probes are only supplied with power during the measurements

ORP-D type probes with M8 connector

The digital probes use a M8 connector for waterproof connection to the equipment. Figure 1 shows the pin view (male) of the M8 connector. A table with the pin description is given below (Table 1).

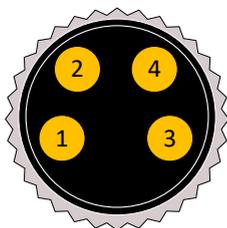

M8 Connector
pin view(male)

Figure 1. Pin view (male) of the M8 connector.

Table 1. Pin description of the M8 connector of the ORP-D type probes.

Function	Wire colour	Connector pin	Comment
Power supply	Brown	1	+12 volt
Ground	Black	4	0 volt
Data	White	2	SDI-12 communication
Reference	Blue	3	spare

ORP-B type probes with open wires

The analog B type soil Redox probes have Pt electrodes, no temperature sensor and no integrated reference electrode. An external reference electrode (e.g. the REF-12-0-A) should be connected to perform mV measurements. Figure 2 shows an example of an ORP-B type soil Redox probe (ORP-30-1-B). The wire scheme is given in Table 2.



Figure 2. ORP-30-1-B (B type soil Redox probe).

Table 2. Wire scheme of the ORP-B type probes

Function	Wire colour	Comment
Electrode 1	Brown	Top
Electrode 2	Blue	optional electrode
Electrode 3	White	optional electrode
Electrode 4	Black	Bottom
Cable screen	Yellow/Green	

ORP-A type probes with open wires

The analog A type soil Redox probes have a single Pt electrode, a temperature sensor and an integrated reference electrode. Figure 3 shows an example of an ORP-A type soil Redox probe (ORP-30-1-A). The wire scheme is given in Table 3.

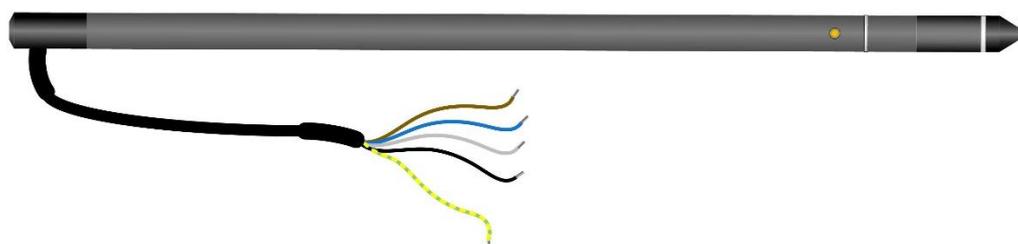


Figure 3. ORP-30-1-A (A type soil Redox probe).

Table 3. Wire scheme of the ORP-A type probes

ORP 30-1-A			ORP-40-4-A and ORP 80-4-A		
Function	Wire colour	Comment	Function	Wire colour	Comment
Pt electrode 1	Brown	-	Pt electrode 1	Brown	-
-	-	-	Pt electrode 2	Red	-
-	-	-	Pt electrode 3	Pink	-
-	-	-	Pt electrode 4	Yellow	-
Reference	Blue	-	Reference	Blue	-
Thermistor	White	NTC (Table 4)	Thermistor	White	NTC (Table 4)
Thermistor	Black		Thermistor	Grey	
Cable screen	Yellow/ green	-	Cable screen	Yellow/ green	-

Table 4. NTC (thermistor specifications)

Temp.°C	Ohms	Temp.°C	Ohms	Temp.°C	Ohms	Temp.°C	Ohms	Temp.°C	Ohms
-20	97006	0	32651	20	12493	40	5325	60	2487
-19	91553	1	31031	21	11943	41	5116	61	2399
-18	86439	2	29500	22	11420	42	4916	62	2315
-17	81641	3	28054	23	10923	43	4724	63	2234
-16	77138	4	26687	24	10450	44	4542	64	2157
-15	72911	5	25395	25	10000	45	4367	65	2082
-14	68940	6	24172	26	9572	46	4200	66	2011
-13	65209	7	23016	27	9165	47	4040	67	1942
-12	61703	8	21921	28	8777	48	3887	68	1876
-11	58405	9	20885	29	8408	49	3741	69	1813
-10	55304	10	19903	30	8056	50	3601	70	1752
-9	52385	11	18973	31	7721	51	3467		
-8	49638	12	18092	32	7402	52	3339		
-7	47050	13	17257	33	7097	53	3216		
-6	44613	14	16465	34	6807	54	3098		
-5	42317	15	15714	35	6530	55	2985		
-4	40151	16	15001	36	6266	56	2877		
-3	38110	17	14324	37	6014	57	2773		
-2	36184	18	13682	38	5774	58	2674		
-1	34366	19	13073	39	5544	59	2579		

Thermistor specification

Resistance @ 25 °C = 10,000 Ohm

Tolerance 0-60 °C = 0.2 °C

Beta value 25/85 = 3976 K

SDI-12 communication

SDI-12 is a well-known communication standard for a variety of sensors used for environmental monitoring. SDI-12 is a digital communication protocol connected by a 3-wire connection: supply, ground and communication (data). As the analog signals are

converted to digital signals in the sensor itself, (electromagnetic) interferences are avoided. SDI-12 sensors are command operated. To perform measurements, commands need to be sent to the sensor.

SWAP instruments supplies you with the instrumentation to get sensor data without bothering the technical SDI-12 knowledge. Readout instruments like the SWI interface in combination with the app, know how to 'talk to an SDI-12 probe'. Also, various dataloggers like the Delta-T Devices GP2 datalogger and Campbell Scientific dataloggers communicate without problems. The SWAP instruments probes are equipped with SDI-12 communication version 1.3. For a full explanation of the SDI-12 commands please go to:

http://www.sdi-12.org/archives_folder/SDI-12_version1_3%20January%2028,%202016.pdf

Manual communication with a probe may be needed, for example, when connecting to a third-party datalogger. The basic commands for communication with SDI-12 sensors are straightforward. When sensors have unique addresses, sensor cables can be combined to mutual inputs.

Table 5 shows some SDI-12 functions, commands and responses. 'a' is always the first character in a command. It denotes the sensor address and can be any character from 0-9, a-z or A-Z. Address 0 is reserved for new sensors (from the factory). It can be changed by the user. When multiple sensors are connected to the same communication line, each sensor needs its own individual address. All sensor commands end with the '!' sign. All sensor answers are followed by non-visible control characters <CR><LF> forcing a new line.

Table 5. Examples of basic SDI-12 functions, commands and responses.

FUNCTION	COMMAND	RESPONSE	COMMENT
Address acknowledge	a!	a	sensor is available
change address A to b	aA,b!	b	sensor address is now b
Sensor identification	a!	a!3SWAPINSTREDOXA11321032001	SDI-12 version 1.3
		a!3SWAPINSTREDOXA11321032001	manufacturer
		a!3SWAPINSTREDOXA11321032001	sensor model
		a!3SWAPINSTREDOXA11321032001	sensor version
		a!3SWAPINSTREDOXA11321032001	serial number
measurement	aM!	aM000025	in 2 seconds data available
		aM000025	5 measurements available
data register	aD0!	a-1.3-6.3+7.9-2.8+20.6	channel 1 measure = -1.3
		a-1.3-6.3+7.9-2.8+20.6	channel 2 measure = -6.3
		a-1.3-6.3+7.9-2.8+20.6	channel 3 measure = +7.9
		a-1.3-6.3+7.9-2.8+20.6	channel 4 measure = +2.8
		a-1.3-6.3+7.9-2.8+20.6	temperature °C = +20.6

6.5 De-installation

It is **recommended** to carefully dig out the installed SWAP soil Redox probes. This is especially essential for dry soils and for the longer version ORP probes (e.g., ORP-40-4-D and ORP-80-4-D).

- ✓ Carefully dig out the SWAP soil Redox probe.
- ✓ Do not pull out the SWAP soil Redox probe using the electrical cable.
- ✓ Pull by holding the glass-fiber enforced epoxy shaft with both hands.
- ✓ Clean the SWAP soil Redox probe before re-installing into a soil. See chapter 7 (Maintenance) for further details.

6.6 Temperature correction

Redox measurements are influenced by temperature, but in general cannot be compensated for this effect. Redox measurements reflect all oxidation and reduction reactions taking place at the surface of the Redox electrode. Since many chemical species can be involved in these reactions - each with their own temperature dependency - it is not possible to define a single temperature compensation equation.

However, if a sample consists of a single or dominant (high poise) redox species, temperature compensation can be applied. For example, Redox test (calibration) solutions often consist of a chemical species with a high poise. The temperature influence of Consort ORP test solution 358 mV, for example, is established at approximately -1.2 mV/°C (between 5 and 40 °C). Also, Redox measurements in chlorinated water can be corrected for the influence of temperature.

The temperature correction factor can be established as follows:

- 1) Measure the Redox potential and temperature of a sample (e.g., Redox test solution or soil sample) at varying temperatures.
- 2) Plot the temperature on the x-axis and the measured Redox potential on the y-axis (see Figure 4: example of the T effect on Hanna ORP test solution 240 mV). Perform a linear regression analysis. The slope is the temperature correction factor (T_factor).
- 3) The equation for the temperature correction is as follows:

$$Eh_T_compensated (@ 25\text{ }^{\circ}\text{C}) = Eh_measured + T_factor \times (25 - T_measured)$$

In which,

Eh_T_compensated = Temperature compensated Redox potential (in mV)

Eh_measured = Measured Redox potential (in mV)

T_factor = temperature correction factor

T_measured = measured temperature (in °C)

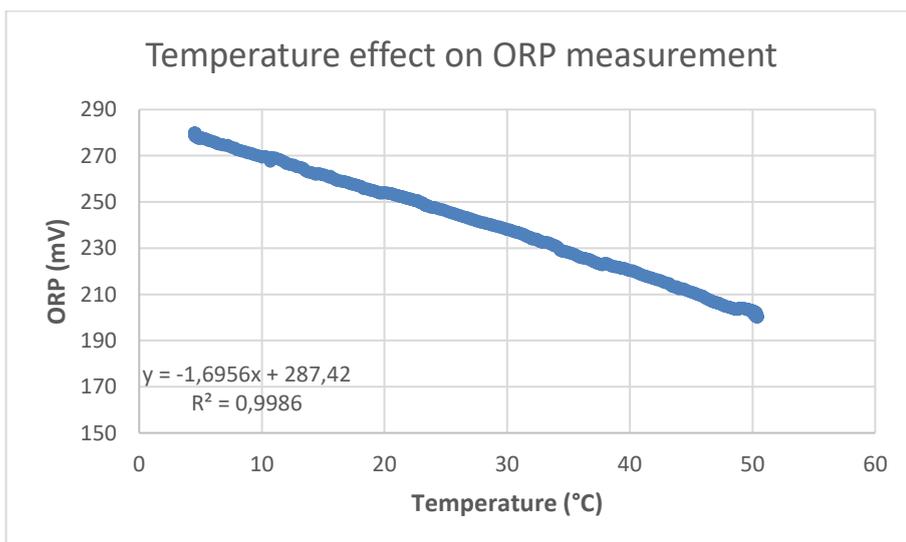


Figure 4. Temperature effect on the ORP measurement of Hanna ORP test solution 240 mV. Measured with SWAP ORP-30-1-D (vs. 4.76 M KCl @ 25°C Ag|AgCl reference electrode).

7. Maintenance

7.1 Calibration

The SWAP soil Redox probes are delivered uncalibrated. It is possible to establish an external calibration by measuring 1 (offset) or more (calibration line) Redox/ORP test solutions with specified Redox/ORP values. This can be done with any suitable Redox test solution (e.g., Zobell's Solution, Quinhydrone Solutions and/or tap water). There are also ORP test solutions on the market that contain/consist of sulphuric acid with acidities as low as $\text{pH} < 1$. We do not recommend these test solutions since they can dissolve the glass fibre epoxy housing of the SWAP soil Redox probes.

External calibration can be performed as follows:

Materials:

- SWAP soil Redox probe
- readout unit or datalogger
- Redox calibration / test solutions

External calibration

- 1) Connect the SWAP soil Redox probe (clean the probe before calibration) to the readout unit or datalogger.
- 2) Place the probe in a beaker filled with the Redox calibration / test solution. Make sure that the reference electrode, the Redox electrode (Pt ring) and temperature sensor of the SWAP soil Redox probe are fully immersed in the solution. Register/save/store the measured Redox potential and temperature (when the signal is stable).
- 3) Repeat step 2 for every Redox calibration / test solution. Rinse (with demi water) and dry your probe before inserting into a new Redox calibration / test solution.
- 4) For calibration / test solutions with a high 'Redox strength' (poise) the mV reading should be stable within 30 seconds. When a calibration / test solution with a low poise is used - like tap water - it might take an hour before the mV reading is stable. In general, Redox species in tap water react slowly with Pt.
- 5) Determine the offset when 1 calibration / test solution is used or the slope, intercept and correlation coefficient of the calibration line when at least 2 calibration / test solutions are used.

Note: the mV reading depends on the calibration / test solution used, the type of reference electrode used and temperature.

Till May 2025 SWAP soil Redox probes had integrated 3.0 M KCl gel Ag|AgCl reference electrodes. After this date, this has been changed to 4.76 M KCl (@ 25°C).

Uncontrolled quality

When the calibration data show deviating values from the quality criteria, the error can, for example, be caused by:

1) A contaminated or expired calibration / test solution.

Check the expiry date of the calibration / test solution. Use for every calibration fresh solution to avoid contamination.

2) A fouled Redox electrode (Pt ring).

See chapter 7.2 (Cleaning the Redox electrodes) for more details.

3) Problems with the reference electrode.

See chapter 7.3 (Maintenance of the SWAP reference electrode) for more details.

4) Problems with the readout unit or datalogger.

Check the wiring of the readout unit or datalogger.

Example 3-point calibration

An example of a 3-point calibration is given in Appendix C.

7.2 Cleaning the Redox electrodes (watch the instructional video on the SWAP instruments website)

Maintenance of the Redox electrode(s) - Pt ring(s) - of the SWAP soil Redox probes is relatively simple. They should always be cleaned before use and whenever retrieved from the soil. Use the following materials:

- ✓ Piece of cotton cloth.
- ✓ Water and soap, ethanol and/or mild acid (e.g., 0.1 M HCl)
- ✓ Distilled water.
- ✓ Waterproof abrasive paper: P1200 grit or higher

Clean the Redox electrodes with a piece of cotton cloth using the general cleaning agents: water and soap, ethanol and/or mild acid (e.g. 0.1M HCl). Wear protective gloves when using a mild acid. Do not use chemicals that are more aggressive than necessary. Rinse with distilled water after cleaning. Dry afterwards with a piece of cotton cloth.

Probes applied in oxidising environments may respond slowly when subsequently used in reducing environments. Probes may be 'poised' when they have been in contact with sulfides: a thin layer of PtS may have formed that influences the Redox measurements. Polishing the Pt surface with abrasive paper P1200 grit or higher may solve these problems, since this generates a fresh Pt surface.

⚠ Caution: always wet polish as contact with fiberglass dust from the probes is undesirable.

7.3 Maintenance of the SWAP reference electrode (watch the instructional video on the SWAP instruments website)

SWAP instruments offers both integrated (e.g., in SWAP soil redox probes) and stand-alone reference electrodes. These are all saturated (4.76 M @ 25°C) KCl Ag|AgCl double junction

reference electrodes. Although, SWAP reference electrodes are designed for long-term monitoring, the liquid junction can get clogged (e.g., with soil particles) and the KCl concentration of the internal solution can change during use. Therefore, regular maintenance is strongly advised (preferably monthly).

Use the following **materials** for maintenance:

- ✓ Piece of cotton cloth and/or tissue that doesn't release fibers
- ✓ Water and soap
- ✓ Distilled water (in laboratory wash bottle)
- ✓ SWAP Electrolyte-100sat (4.76 M KCl @ 25°C)
- ✓ SWAP KCl (≥99.9%)
- ✓ SWAP tools (syringe, pipette tip, spoon and cocktail stick) for refilling the reference electrode

1) Clean the SWAP probe containing an integrated reference electrode or the SWAP stand-alone reference electrode with water and soap using a piece of cotton cloth and or tissue. Rinse the probe with distilled water. Dry with a piece of cotton cloth and/or tissue.

2) Open the reference electrode - preferably in a clean workspace to avoid contamination of the inside of the reference electrode.

3) Unscrew the external sealing cap of the reference electrode. Remove the internal solution (and undissolved KCl) from the main chamber by rinsing it with distilled water.

4) Unscrew the internal sealing cap of the small chamber of the reference electrode. Remove the internal solution (and undissolved KCl) from the small chamber by rinsing it with distilled water.

5) Remove the (adhering) distilled water from the small and main chamber of the reference electrode by holding it in one hand and shaking gently.

6) Dry the main chamber of the reference electrode using a piece of cotton cloth or tissue.

7) Hold the SWAP probe or stand-alone reference electrode with the reference electrode upward and the cable top downward.

8) Flush and fill the small and main chamber of the reference electrode completely with SWAP Electrolyte-100sat (4.76 M KCl @25°C) using the SWAP syringe. Make sure the syringe is clean.

9) Remove the air from the small chamber by moving the blunt side of the cocktail stick approximately 20 times in and out the small chamber.

10) Add ~0.3 g KCl (≥99.9%) to the small and main chamber using the supplied spoon (~2 level scoops).

11) Remove the air from the small chamber by moving the sharp side of the cocktail stick approximately 20 times in and out the small chamber.

12) Screw the internal sealing cap on the small chamber (hand tight).

13) Screw the external sealing cap on the main chamber (hand tight).

14) Remove remnants of Electrolyte-100sat and/or KCl powder from the outside of the probe or stand-alone reference electrode using distilled water.

Calibration and testing

After maintenance of an integrated reference electrode (e.g., in a SWAP soil Redox probe), recalibrate the probe.

See chapter 7.1 (Calibration) for more details.

After maintenance of a stand-alone SWAP reference electrode, it can be tested versus another reference electrode that is known to function properly.

See chapter 7.4 (Testing of the SWAP stand-alone reference electrode) for more details.

7.4 Testing of the stand-alone SWAP reference electrode

To determine if the SWAP (stand-alone) reference electrode (still) functions according to specifications, it can be tested (calibrated) against another reference electrode that is known to be working properly. To ascertain this, this other reference electrode should only be used for calibration purposes. The reference electrode should be the same type of reference electrode (Ag|AgCl) with the same internal solution (saturated: 4.76 M KCl @ 25°C) as the SWAP (stand-alone) reference electrode.

Use the following **materials** for testing:

- ✓ Beaker with tap water
- ✓ SWAP (stand-alone) reference electrode
- ✓ Reference electrode for calibration purposes
- ✓ mV meter

1) Clean the SWAP (stand-alone) reference electrode with water and soap using a piece of cotton cloth. Rinse the probe with distilled water. Dry with a piece of cotton cloth.

2) Connect the SWAP (stand-alone) reference electrode to one input of the mV meter and the other reference electrode to the other input of the mV meter.

3) The readout, difference between the two reference electrodes, should ideally be 0 mV. In practise, ± 5 mV is good for soil redox measurements.

4) If the readout is > 5 mV, this can be caused by a) the KCl concentration of the internal solution has changed, b) the liquid junction is blocked, c) the reference electrode for calibration purposes or the mV meter doesn't work properly.

Ad a) Refill the reference electrode with fresh internal solution and repeat the test procedure.

See chapter 7.3 (Maintenance of the SWAP reference electrode) for details.

Ad b) Clean the liquid junction of the SWAP (stand-alone) reference electrode according to 1) and repeat the test procedure.

Ad c and d) Make sure that the reference electrode for calibration purposes and/or mV meter work properly.

8. Technical support

8.1 Conditions of Sale

Our Conditions of Sale (see <https://www.swapinstruments.com/conditions-of-sale//> for the latest version) set out the legal obligations of SWAP instruments on these matters. The following paragraphs summarise the position of SWAP instruments, but reference should always be made to the exact terms of our Conditions of Sale, which will prevail over the following explanation.

- 1) SWAP instruments warrants that the goods will be free from defects arising out of the materials used or poor workmanship for a period of two years from the date of delivery.
- 2) SWAP instruments shall be under no liability in respect of any defect arising from fair wear and tear, and the warranty does not cover damage through misuse or inexpert servicing, or other circumstances beyond their control.
- 3) If the buyer experiences problems with the goods they shall notify SWAP instruments (or SWAP instruments' local distributor) as soon as they become aware of such problem. SWAP instruments may rectify the problem by replacing faulty parts free of charge, or by repairing the goods free of charge at the premises of SWAP instruments in The Netherlands during the warranty period.
- 4) If SWAP instruments requires that goods under warranty be returned to them from abroad for repair, SWAP instruments shall not be liable for the cost of carriage or for customs clearance in respect of such goods. However, SWAP instruments requires that such returns are discussed with them in advance and may at their discretion waive these charges.
- 5) SWAP instruments shall not be liable to supply products free of charge or repair any goods where the products or goods in question have been discontinued or have become obsolete, although SWAP instruments will endeavour to remedy the buyer's problem.
- 6) SWAP instruments shall not be liable to the buyer for any consequential loss, damage or compensation whatsoever (whether caused by the negligence of the SWAP instruments, their employees or distributors or otherwise) which arise from the supply of the goods and/or services, or their use or resale by the buyer.
- 7) SWAP instruments shall not be liable to the buyer by reason of any delay or failure to perform their obligations in relation to the goods and/or services if the delay or failure was due to any cause beyond the reasonable control of SWAP instruments.

8.2 Service and repairs

Users in countries that have a SWAP instruments distributor or technical representative should contact them in the first instance.

Please contact our service department if one of our products or systems is damaged:

support@swapinstruments.com

Spare parts for our products and systems can normally be supplied within a few working days of receiving an order. Spare parts and accessories for products not manufactured by SWAP instruments may have to be obtained from one of our suppliers. This may result in longer delivery times.

We aim to complete repairs within 10 working days of the customer giving their consent for us to proceed with the repair at the quoted price. In case the products or systems cannot be repaired by SWAP instruments, external specialists will be involved. This may result in longer repair times.

No goods or equipment should be returned SWAP instruments without first obtaining the return authorisation from SWAP instruments or our distributor.

8.3 Technical support

SWAP instruments provides free technical support on all our products and systems. Please contact our service department and we will contact you within one working day.

support@swapinstruments.com

Users in countries that have a SWAP instruments distributor or technical representative should contact them in the first instance.

8.4 Contact details

SWAP Instruments B.V.
Meester Dekkerstraat 4
1901 PV Castricum
The Netherlands
+31 (0)6 25102980
support@swapinstruments.com
www.swapinstruments.com

Appendix A. RoHS, CE and FCC declarations

RoHS Compliance Declaration

Last updated November 6th 2023



Compliance Certificate of SWAP instruments B.V.

SWAP instruments B.V. certifies that, to its knowledge, their products conform to the European Union's Restrictions on Use of Hazardous Substances in Electrical and Electronic Equipment (RoHS) Directive 2002/95/EC for regulated substances. This certificate is applicable to the following products:

ORP-30-1-D, ORP-40-4-D and ORP-80-4-D

This status is based upon SWAP instruments B.V. understanding of RoHS and SWAP instruments B.V. knowledge of the materials that go into its products, as of the date of disclosure of material content information.

Banned substances	RoHS proposed Maximum Concentration Value (in ppm)
Cadmium (Cd):	<100
Lead (Pb):	<1000
Mercury (Hg):	<1000
Hexavalent Chromium (Cr VI):	<1000
Polybrominated Biphenyls (PBB):	<1000
Polybrominated Diphenyl Esters (PBDE):	<1000
Bis(2-Ethylhexyl) phthalate (DEHP):	<1000
Benzyl butyl phthalate (BBP):	<1000
Dibutyl phthalate (DBP)	<1000
Diisobutyl phthalate (DIBP)	<1000

SWAP instruments B.V.

Dr. Nikolaj Walraven
Director

7th November 2023

Important information and disclaimer: Information provided by SWAP instruments B.V. on its website or in other communications, concerning the substance content of its products, represents SWAP instruments B.V. belief as of the date that it is provided. SWAP instruments B.V. bases its knowledge and belief on information provided by third party component suppliers and makes no representation as to the accuracy of such information. SWAP instruments B.V. confirms that none of the above substances are used in any PCB assembly operations. Efforts are underway to better integrate information from third parties. SWAP instruments B.V. has taken and continues to take reasonable steps to provide representative and accurate information, but may not have conducted destructive testing or chemical analysis on incoming parts. In no event shall SWAP instruments B.V. liability, arising out of such information, exceed the total purchase price of SWAP instruments B.V. part(s) at issue sold by SWAP instruments B.V. to Customer on an annual basis.

SWAP instruments
Meester Dekkerstraat 4
1901 PV Castricum
The Netherlands

info@swapinstruments.com
www.swapinstruments.com
+31 6 25102980
CC: 80243142

EU DECLARATION OF CONFORMITY (No. 2023/123-01)

This Declaration of Conformity is issued under the sole responsibility of the manufacturer

MANUFACTURER

Company name	SWAP Instruments B.V.
Full address	Meester Dekkerstraat 4
Postal code	1901 PV
Place	Castricum
Country	The Netherlands

IDENTIFICATION OF ELECTRICAL PRODUCT

(Commercial) name	REDOX probes
Function/Intended use	Soil/substrate environmental monitoring probe
Models	Probe 30-1-D/Probe 40-4-D/ Probe 80-4-D
Type	/
Batch/Serial	Refer to product label for further information

*The object of the Declaration described above is in conformity with all relevant provisions of
RoHS Directive 2011/65/EU;*

In conjunction with the following relevant harmonised standards or technical specifications


EN IEC 63000:2018

Signed for and on behalf of:

Place of issue: Castricum, The Netherlands
Identity: Hans van Rheenen
Function: Director Innovation & Engineering

Date of issue: 21.05.2024

Signature:

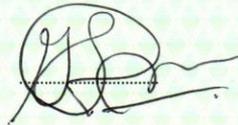

SUPPLIER'S DECLARATION OF CONFORMITY (No. 2021/123-01)

This Declaration of Conformity is issued under the sole responsibility of the manufacturer

MANUFACTURER

Company name	SWAP Instruments B.V.
Full address	Meester Dekkerstraat 4 1901 PV Castricum
Country	The Netherlands

USA RESPONSIBLE PARTY

Company name	TianHeng Consulting, LLC
Full address	392 Andover Street, Wilmington, MA 01887
Country	United States of America
Contact details	+1 (617) 997-4010

DESCRIPTION AND IDENTIFICATION OF THE EQUIPMENT

Function/intended use	Soil/substrate environmental monitoring probe
Model / Type	Probe 30-1-D/Probe 40-4-D/ Probe 80-4-D
Serial number	See product label
Commercial name	SWAP Probe

The object of the Declaration described above is in conformity with all relevant provisions of

FCC (47 CFR Part 15B);

Supplementary information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.



Signed for and on behalf of

Place of issue: Castricum
The Netherlands

Identity: Hans van Rheenen
Function: Director Innovation & Engineering

Date of issue: 01.03.2024


Signature:

Appendix B. Product identification

All our soil Redox probes are unique identified with a cable label indicating:

- Probe type indication (probe name): ORP = probe to measure ORP
e.g., ORP-80-4-D (name of an ORP probe that we sell)
- Serial number (SN): SN:YYMMDDNN
YY production year
MM production month
DD production day
NN number of product
- Website address: SWAPinstruments.com
- Version: Hardware version 3.0 /Softwareversion 1.14
- Nominal operating voltage: 12V D.C.
- Nominal current consumption: 5 mA
- Environmental protection: IP67
- Compliance marking: FCC, CE and RoHS
- Company name and address: SWAP instruments
Meester Dekkerstraat 4
Castricum
The Netherlands

For illustration purposes, the label of ORP probe with the name ORP-80-4-D is shown below.

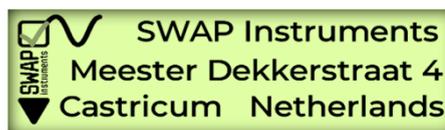

Appendix C. Example of a 3-point calibration

This is an example how to calibrate your SWAP soil Redox probe with 3 calibration / test solutions. The details of the test solutions are given in Table 6. The calibration data are given in Table 7. Figure 5 shows the calibration graph.

Table 6. Specifications of the 3 calibration / test solutions (versus saturated Ag|AgCl reference electrode).

Temperature (°C)	Consort ORP test solution 124 mV ^{#1}	Consort ORP test solution 358 mV ^{#1}	Hanna ORP test solution 240 mV ^{#2}
Data in this table are vs. saturated KCl Ag AgCl reference electrode			
2	153	-	-
4	150	-	-
5	-	381	280
6	147	-	-
8	144	-	-
10	141	376	272
12	138	-	-
14	136	-	-
15	-	370	263
16	134	-	-
18	132	-	-
20	130	364	254
22	127	-	-
24	125	-	-
25	124	358	246
26	123	-	-
28	125	-	-
30	122	352	238
32	120	-	-
34	117	-	-
35	-	346	229
36	115	-	-
38	112	-	-
40	99	340	221
T effect	~ -1.1 mV/°C	~ -1.2 mV/°C	~ -1.7 mV/°C
Source	Consort data sheet	Consort data sheet	SWAP instruments data (adjusted for reference electrode used: +6 mV)

^{#1} =versus saturated KCl Ag|Ag Cl reference electrode @ 25 °C.

^{#2} =versus 3.5 M KCl Ag|Ag Cl reference electrode @ 25 °C.

Table 7. Calibration data of the 3 calibration / test solutions measured with a SWAP ORP soil Redox probe (versus saturated KCl Ag|AgCl reference electrode).

ORP test solution	Certified value (mV) according specs.	Adjusted certified value (mV) vs saturated KCl @ 25 °C	Measured value (mV) vs saturated KCl @ 25 °C	Calibrated value (mV) vs saturated KCl @ 25 °C
Consort 124 mV (vs. saturated KCl @ 25 °C)	124	124	140	124
Consort 358 mV (vs. saturated KCl @ 25 °C)	358	358	354	358
Hanna 240 mV (vs. 3.5 M KCl @ 25 °C)	240	246	251	246

The calibration results in this example are as follows:

Slope = 0.8892

Intercept = 30.554 mV

R² = 0.9998

Based on this calibration graph, measured soil Redox values can be recalculated using equation 1.

$$Eh_{\text{calibrated}} = (Eh_{\text{measured}} - 30.554) / 0.8892$$

In which,

Eh_{calibrated} = calibrated Redox potential

Eh_{measured} = measured Redox potential (uncalibrated)

Note: The calibration line is only valid for the Redox potential range that is tested. In case of the above example, the calibration line is valid in the range of 124 to 358 mV (vs saturated KCl Ag|AgCl @ 25 °C).


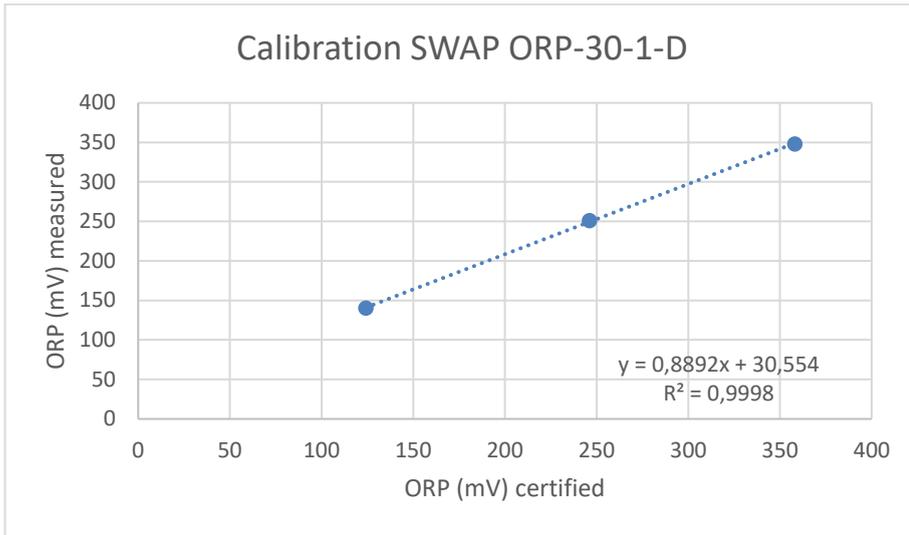


Figure 5. Calibration graph of the measured ORP values vs. the certified ORP values of 3 redox test solutions (vs. saturated KCl @ 25°C Ag|AgCl reference electrode).

Appendix D. Suggestions for datalogger connections

Suggestions for wiring the analog ORP probes in Differential (DIFF) Mode to a logger:

- Connect each individual Pt electrode to a DIFF channel 1..4 H input.
- Connect the reference electrode to all DIF channel 1..5 L inputs.
- Optional: connect a back-up reference as a reference check to DIFF channel 5 H (if the difference voltage rises above 5-10 mV refresh the saturated KCl in the reference electrode).
- Connect all green-yellow cable screen wires to a common \perp signal ground input (only for electromagnetic interference protection).

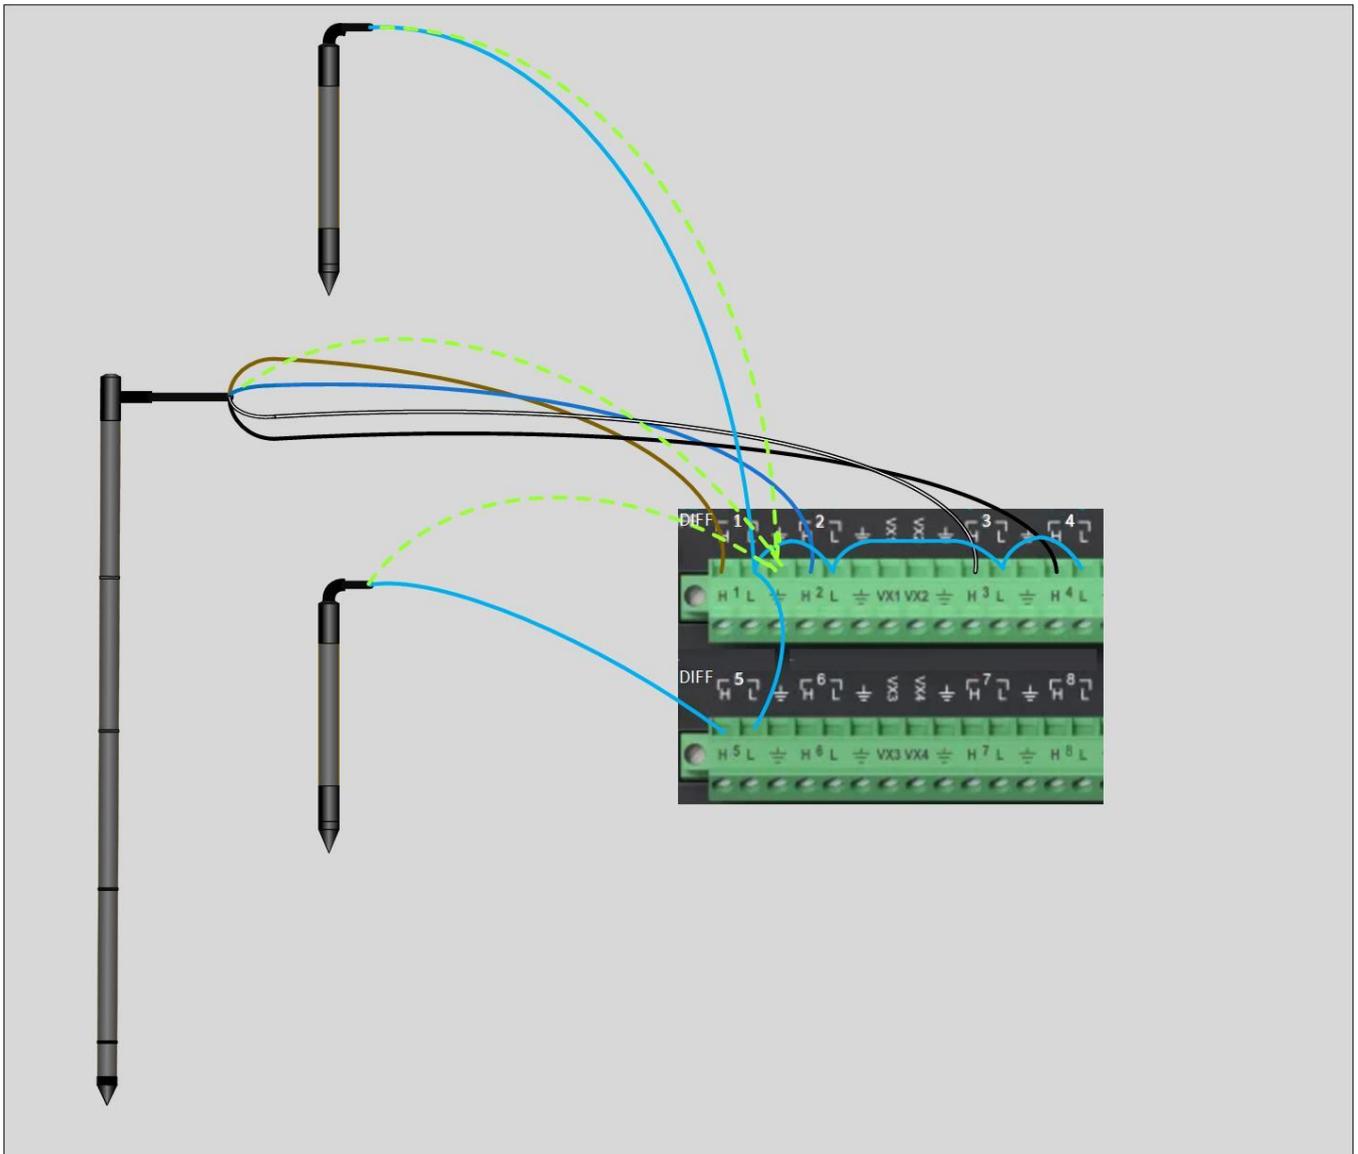

Suggestions for wiring the analog ORP probes in Single Ended (SE) Mode to a logger:


Beware!

The signal ground terminal \perp is not isolated from the logger shielding ground.

Therefore, the logger and his power supply must be isolated from earth!

Place the logger in a plastic enclosure and do not use other sensors or telecom with earth connections!

- Connect each individual Pt electrode to a SE channel 1..4 input.
- Connect the reference electrode to all used SE \perp signal ground inputs.
- Optional: connect a back-up reference as a reference check to Channel SE 9 (if the difference voltage rises above 5-10 mV refresh the saturated KCl in the reference electrode).
- Connect all green-yellow cable screen wires to a common \perp signal ground input (only for electromagnetic interference protection).

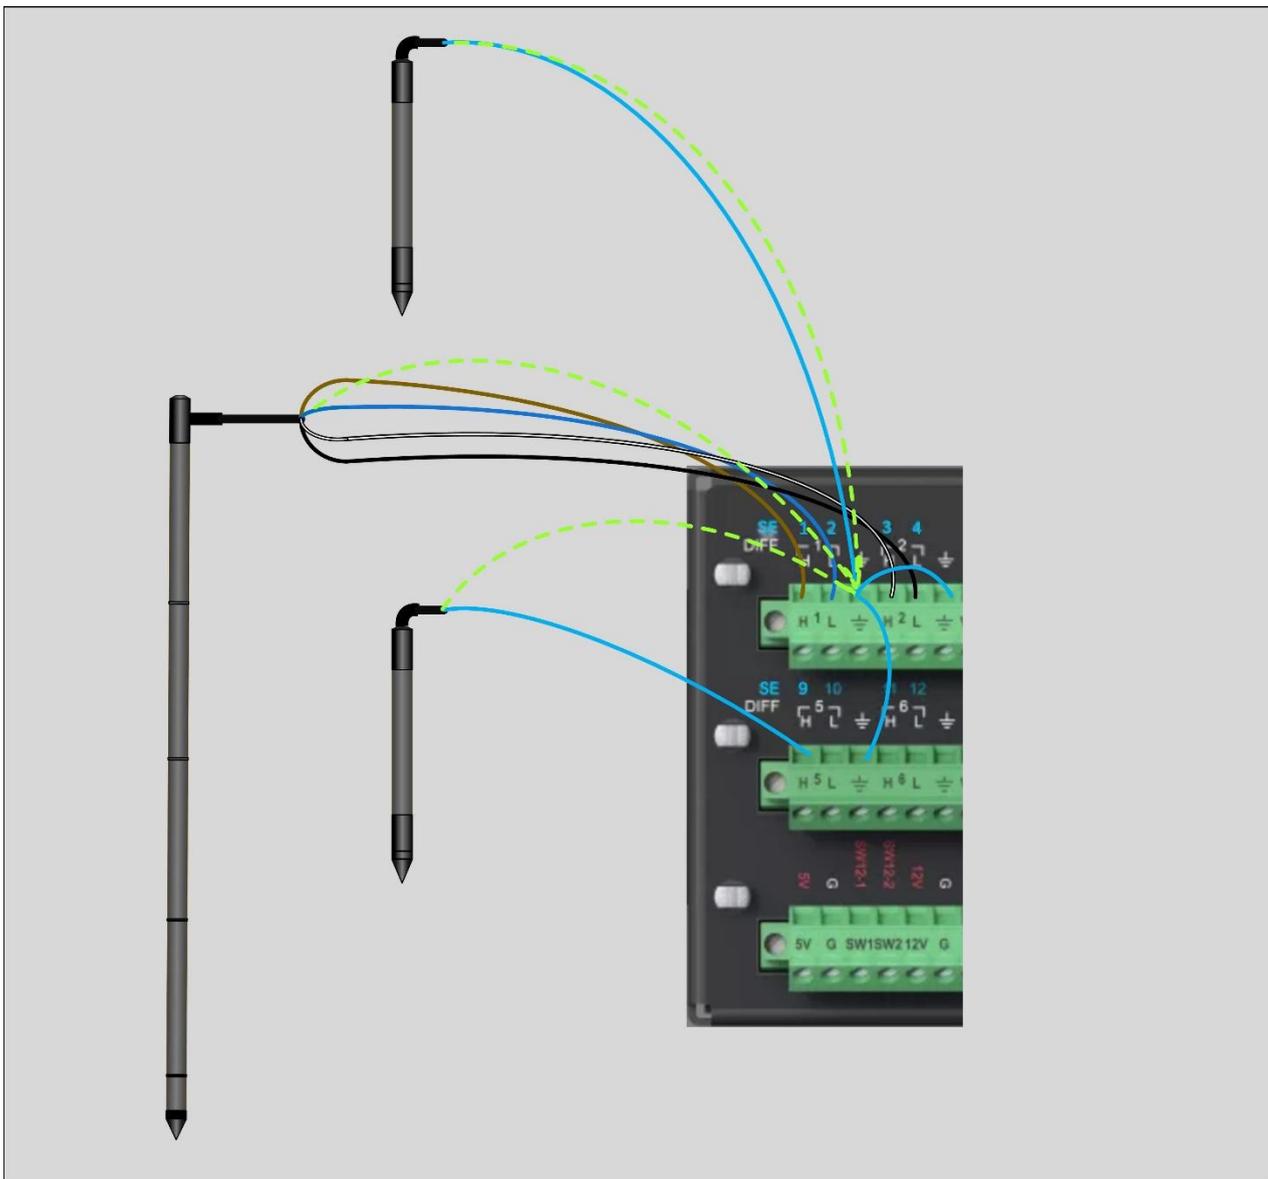

Suggestions for wiring the ORP probes temperature sensor to a logger in single-ended (SE) mode:


The temperature measurement can be done by connecting the probe thermistor sensor (NTC) to the logger. The logger excitation voltage at VX1 with a 10K precision resistor* in series is used to make a voltage divider in combination with the thermistor. Due to the temperature-resistance relation of the thermistor, the divided voltage has a relation to the temperature. This voltage is measured by the logger and converted mathematically to temperature.

Cable length influence on the measured values can be ignored for cables with a maximum length of 100 m.

*Value 10 Kohm, acc. 0.1 % , TC=15 ppm/°C.

[YR1B10KCC - Neohm - Te Connectivity - Through Hole Resistor, 10 kohm, R \(farnell.com\)](#)

- Connect a resistance 10,000 Ohm (10Kohm) from the VX1 excitation voltage output to the SE 4 temperature measurement input channel (i.e., channel 4)
- Connect the white wire to terminal 4
- Connect the black wire to terminal \perp
- Connect all green-yellow cable screen wires to a common \perp signal ground input (only for electromagnetic interference protection)

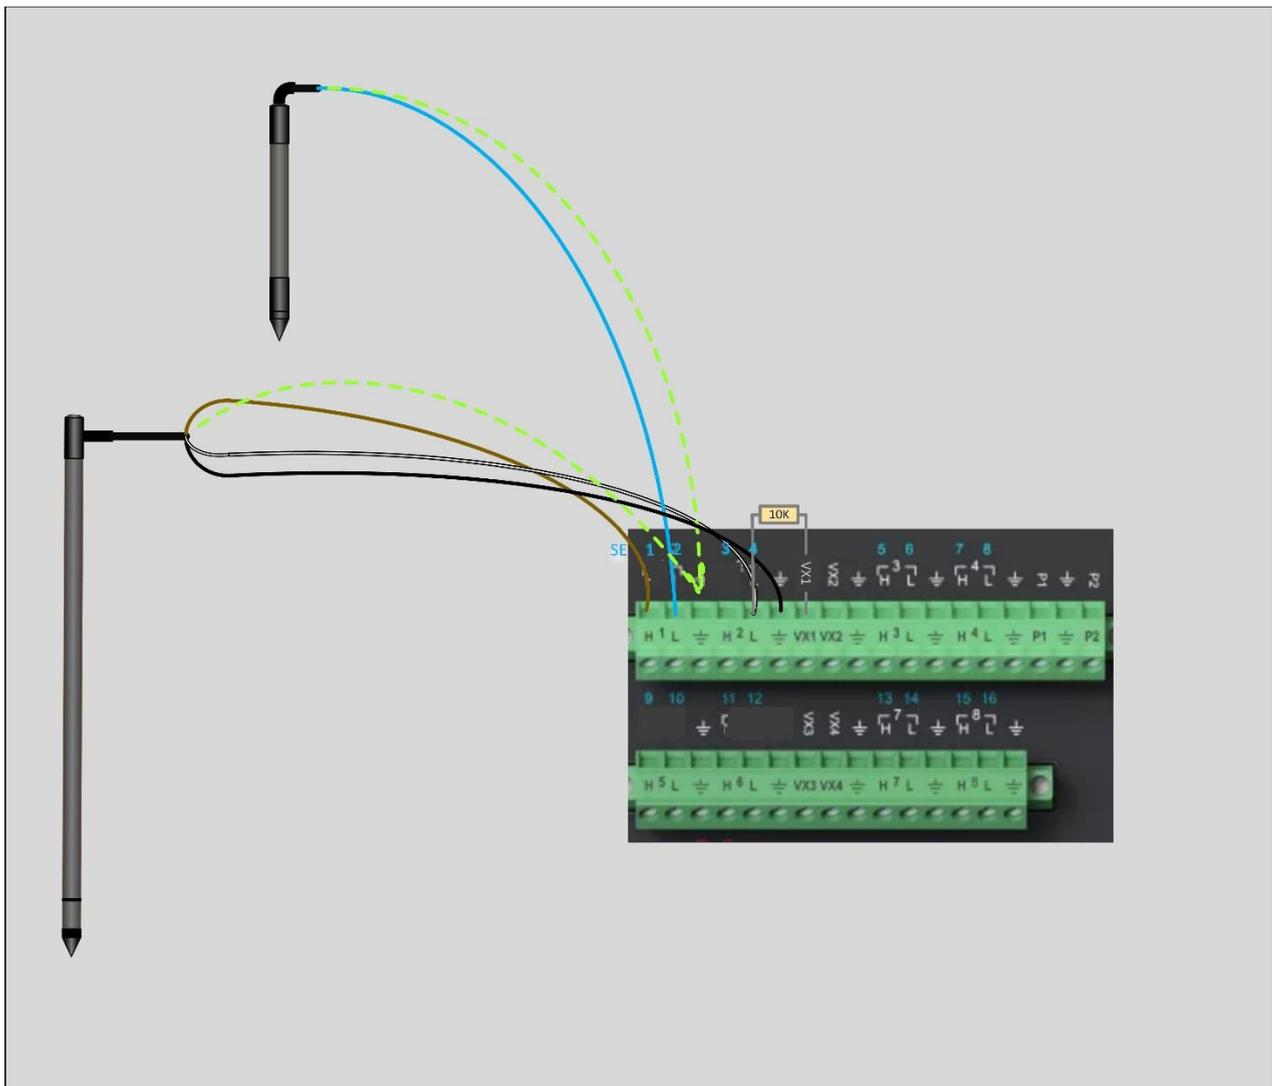

The output voltage, measured with a datalogger, can be calculated based on the following equation:

$$U_{\text{output}} = U_{\text{excitation}} \times R_{\text{thermistor}} / (R_{\text{serial}} + R_{\text{thermistor}})$$

In which,

U_{output} = output voltage in V

$U_{\text{excitation}}$ = excitation voltage in V

$R_{\text{thermistor}}$ = thermistor resistance in Ohm (see Table 4)

R_{serial} = serial resistance in Ohm

Example:

In the Figure below, the temperature is plotted as a function of the output voltage (U_{output}). The output voltage (U_{output}), in this example, is calculated based on an excitation voltage ($U_{\text{excitation}}$) of 1 V and a serial resistance (R_{serial}) of 10,000 Ohm. Based on the polynomial function, shown in the Figure below, the temperature can be calculated based on the measured output voltage (U_{output}).

